


SEIKO

- INSTRUCTION MANUAL
- MANUAL DE INSTRUCCIONES
- MODE D'EMPLOI
- BEDIENUNGSANLEITUNG
- 使用说明书
- 使用説明書

Thank you for purchase of our SEIKO clock.
Please read this instruction manual carefully before use.

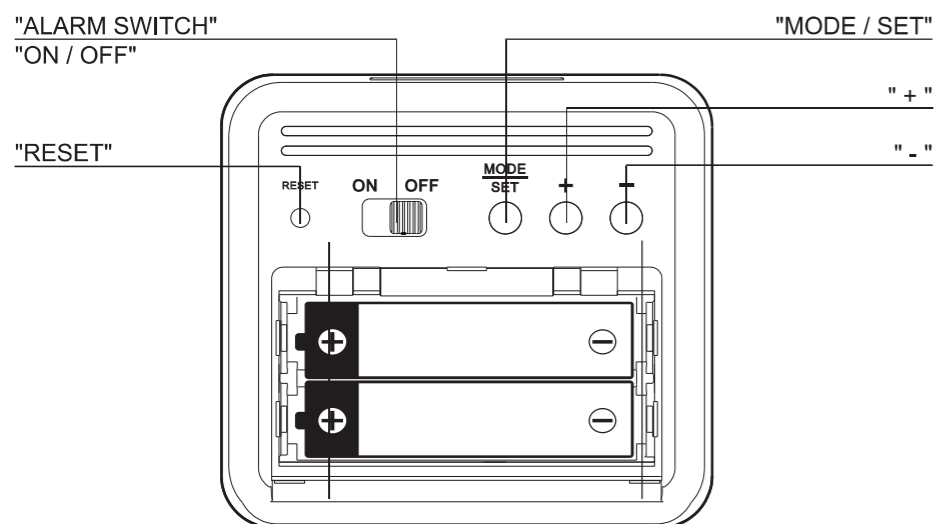

[ENGLISH] INSTRUCTION MANUAL

CAUTION

<Remarks on batteries>

Please be sure to observe the following correct battery usage.

Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

1. Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
2. If you replace batteries, replace all of them at one time with new ones as specified in this manual.
3. Batteries used in this clock are not rechargeable. Never attempt to recharge the batteries.
4. Do not attempt to solder anything directly on to the batteries.
5. Do not expose batteries to direct sunlight, heat, or high humidity.
6. When the clock stops, or it is no longer used, remove the batteries.
7. As the initial batteries are included at the factory, the battery life once in your possession may be shorter than the specified period.

SPECIFICATIONS

Operational temperature: between -10 °C and +50 °C
(the display can be read between 0 °C and +40 °C)

Time setting: Loss/gain (monthly rate) is less than 30 seconds
(At normal temperature range between 5 °C and 35 °C)

Alarm: The electronic beep sounds at a designated time for approximately 5 minutes and automatically stops. The Snooze function activates approximately every 5 minutes. The Snooze function can be used repeatedly.

Calendar: No need to adjust until the year 2099

Stopwatch: Measures up to 99hours 59 minutes 59 seconds.

Timer: 1 second to 99hours 59minutes 59 second (1 second increments)

Display: Time(hour, minute, second) in 12-hour format or 24-hour format, Calendar(month, date, day)

Battery: AAA x 2


Battery life for clock: Approximately 1 year

HOW TO USE THE CLOCK

- Remove the protective film slowly on the display before using the clock.
- Slide and open the battery hatch on the rear of the clock and insert 2 "AAA" batteries follow the plus (+) and minus (-) polarity diagram correctly.
- Press "RESET" button to initiate the unit otherwise the unit may not work properly.

TO SET CALENDAR AND TIME

- ① In the normal time display, press and hold the "MODE/SET" button for 2 seconds or longer, then start the calendar and time setting.
- ② Each time the "MODE/SET" is pressed, the flashing digits on the display will change in the following order.
[Year Setting Display] → [Month-Date Setting Display] → [Time Setting Display] → [12/24 Hour Setting Display]
- ③ Press the "+"/"-" button to set the date, time and 12/24 hour setting.
 - Press and hold the "+"/"-" button to increase the value quickly.
 - The display will automatically return to the normal time display if the "+"/"-" button remains untouched for approximately 5 seconds.

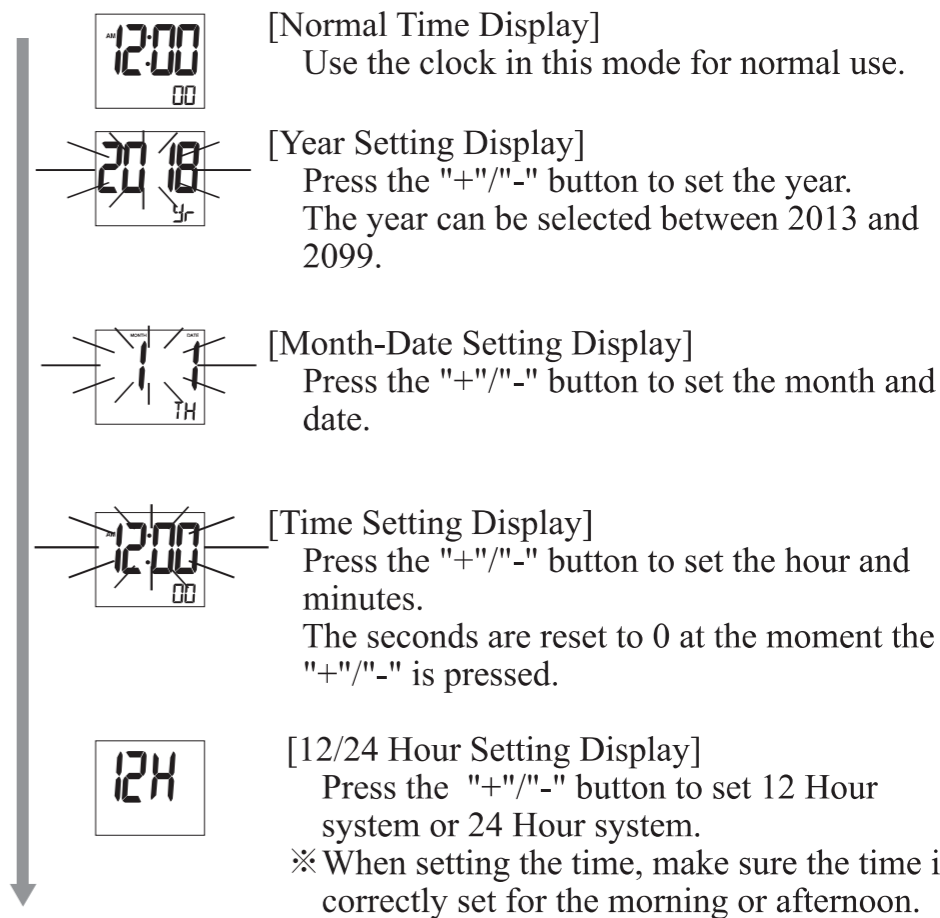

- ④ Press the "MODE/SET" to return to the normal time display after adjusting the settings.

TO SET ALARM

- ① Press the "+"/"-" to enter Alarm Setting Mode. The alarm time will start to flash.
 - In Alarm Setting Mode, press and hold the "+"/"-" to increase or decrease the value quickly.
 - The alarm time will be confirmed automatically if the button remains untouched for approximately 5 seconds.
- ② Push the alarm switch to "ON". The alarm will sound at the designated alarm time.
 - The alarm symbol ((•)) will appear.
 - When the alarm begins to sound, the light will turn on for approximately 5 seconds

Note: The alarm will not sound at the designated alarm time if the Timer Display is being used.

There are two ways to stop the alarm.

- [To deactivate the alarm]
 - Push the alarm switch to "OFF" to stop the alarm.
 - The alarm symbol ((•)) will disappear.
 - [Set the alarm to sound after approximately 5 minutes (Snooze function)]
 - Press the "SNOOZE/LIGHT" button to temporarily stop the alarm. The alarm will sound again after approximately 5 minutes.
 - The alarm symbol ((•)) will flash during the snooze period.
 - The snooze function can be used as many times as you like.
- The alarm will automatically stop after sounding for approximately 5 minutes. (Automatic stop function) In this case, the alarm symbol will remain, and the alarm will sound at the designated alarm time the next day.

HOW TO USE THE TIMER

- ① Press the "MODE/SET" button to switch to the Stopwatch/Timer display.
- ② Press the "MODE/SET" button for 2 seconds or longer, and the second time will start to flash.
- ③ Press and hold the "+" / "-" button to increase or decrease the value quickly.
- ④ Press the "MODE/SET" button, then the second time is set and then the minute time will start to flash.
- ⑤ Press and hold the "+" / "-" button to increase or decrease the value quickly.
- ⑥ Press the "MODE/SET" button, then the minute time is set and then the hour time will start to flash.
- ⑦ Press and hold the "+" / "-" button to increase or decrease the value quickly.
- ⑧ Press the "MODE/SET" button, then the timer has been set.
- ⑨ Press the "SNOOZE/LIGHT" button to start the timer.
 - To stop the timer, press the "SNOOZE/LIGHT" button. (Each time the button is pressed, the timer will alternate between stopping and restarting.)
- ⑩ When the timer reaches 0, the alarm will sound for approximately 1 minute.
 - To stop the alarm while it is sounding, press the "SNOOZE/LIGHT" button, and then the display returns to the designated count down time.

The time of second, minute and hour will be confirmed automatically if the button remains untouched for approximately 5 seconds.

To reset the timer to "00H00M00S", press and hold the "+" and "-" button at the same time for 2 seconds or longer.

HOW TO USE STOPWATCH

- ① Press the "MODE/SET" button to switch to the Stopwatch/Timer display.
 - ② When display shows "00H00M00S", press the "SNOOZE/LIGHT" button to start the stopwatch with flashing H, M and S.
 - Press and hold the "+" and "-" button at the same time for 2 seconds or longer, display will be changed to "00H00M00S". (Each time the button is pressed, the stopwatch will alternate between stopping and restarting.)
 - ③ Count up to "99H59M59S", then start from "00H00M00S"
- Note: While the timer is counting down or stopwatch is counting, the display will not change to the Normal Time Display and Calendar Display even if the "MODE/SET" button is pressed.

TO USE LIGHT FUNCTION

- You may check the time anytime in the dark by simply pressing the "SNOOZE / LIGHT" button. The display will light up for 5 seconds. You can read the time easily and clearly.
- Note: Frequent use of this feature will affect battery life.