 
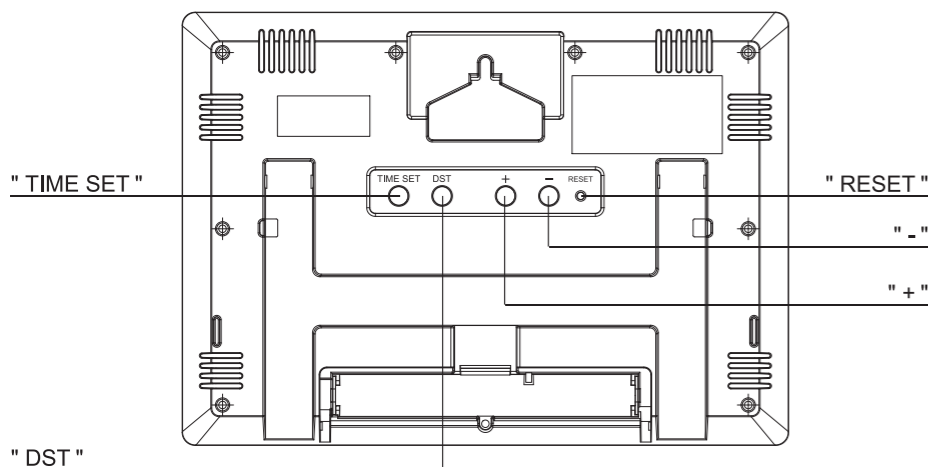 


# SEIKO

- INSTRUCTION MANUAL
- MANUAL DE INSTRUCCIONES
- MODE D'EMPLOI
- BEDIENUNGSANLEITUNG
- 使用说明书
- 使用説明書

Thank you for purchase of our SEIKO clock.  
Please read this instruction manual carefully before use.

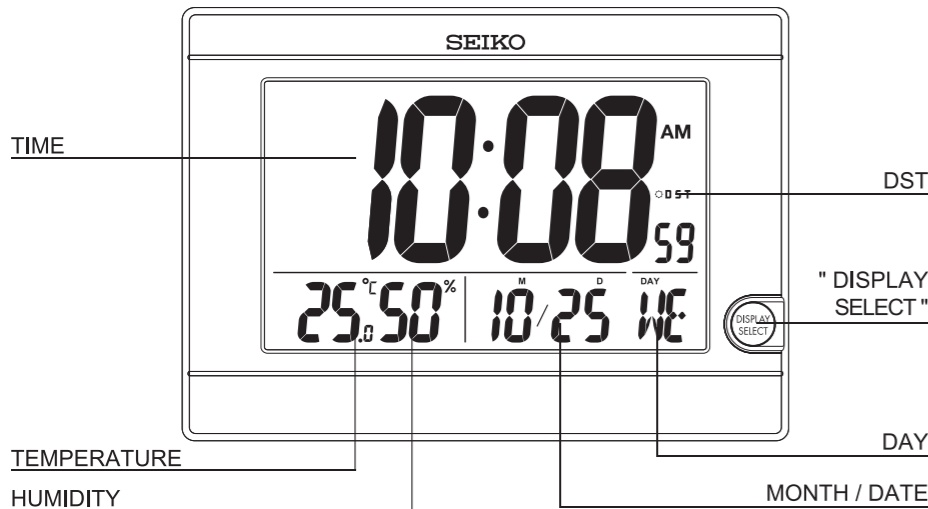

## [ ENGLISH ] INSTRUCTION MANUAL

### CAUTION

<Remarks on batteries>

Please be sure to observe the following correct battery usage.  
Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

1. Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
2. If you replace batteries, replace all of them at one time with new one as specified in this manual.
3. Batteries used in this clock are not rechargeable. Never attempt to recharge the batteries.
4. Do not attempt to solder anything directly on to the batteries.
5. Do not expose batteries to direct sunlight, heat, or high humidity.
6. When the clock stops, or it is no longer used, remove the batteries.
7. As the initial batteries are included at the factory, the actual life once in your possession may be shorter than the specified period.

### SPECIFICATIONS

Operational temperature: between -10 °C ~ +60 °C at 0.1 °C resolution.

Operational humidity: between 20% ~ 90% at 1% resolution. (At normal temperature range between 0 °C and 60 °C)

Time setting: Loss/gain (monthly rate) is less than 30 seconds. (At normal temperature range between 5 °C and 35 °C.)

Calendar: No need of adjustment until the year of 2099.

Display: Time (hour, minute, second) in 12-hour format or 24-hour format, Calendar (month, date, day)

Battery: AA battery, 2 pieces

Battery life for clock: Approximately 1 year

### TEMPERATURE AND HUMIDITY DISPLAY

Since the sensor is inside the clock, the Temperature and Humidity Display may respond to changes in temperature and humidity around the clock with a slight delay.

Display when the temperature or humidity rises above or falls below the threshold value.

- Temperature - When the temperature is below -10°C : "Lo"  
When the temperature is above +60° C : "HI"
- Humidity - When the humidity is below 20% : "Lo"  
When the humidity is above 90% : "HI"

When the temperature exceeds the range of 0°C to 60°C, the humidity will be displayed as "--".

### HOW TO USE THE CLOCK

- Remove the protective film slowly on the display before using the clock.
- Slide and open the battery hatch on the rear of the clock and insert 2 "AA" batteries follow the plus (+) and minus (-) polarity diagram correctly.

### TO SET CALENDAR AND TIME

- Press and hold the "TIME SET" button, the year digits will flash.
- Press the "UP" button or "DOWN" button to set the year value.
- Press the "TIME SET" button, date display will flash, press "UP" button or "DOWN" button to choose date/month or month/date.
- Press the "TIME SET" button, month and date will flash, press "UP" button or "DOWN" button to set month and date.
- Press the "TIME SET" button, the hour and minute digits will flash, press "UP" button or "DOWN" button to set the minute value.
- Press the "TIME SET" button to choose the time format. In 12HR format, "AM" sign will appear to indicate AM hours and "PM" sign for PM hours.
- Press the "TIME SET" button, the temperature can be selected for °C / °F. Press "UP" or "DOWN" to toggle between °C / °F format.
- After setting, press the "TIME SET" button exit the setting mode.

 
NOTE : Press and hold "UP" or "DOWN" button to respectively increase or decrease the value quickly.



[Normal Time Display]  
Use the clock in this mode for normal use.

[Year Setting Display]  
Press the "UP"/"DOWN" button to set the year.  
The year can be selected between 2021 and 2099.

[Month/Date-Date/Month Format Setting Display]  
Press the "UP"/"DOWN" button to set the Month/Date-Date/Month Format.

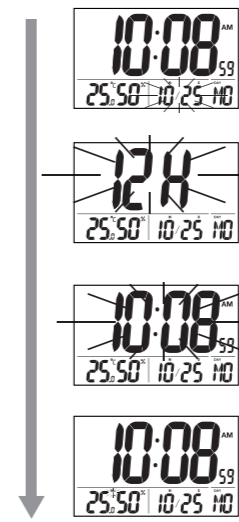

[Month-Date Setting Display]  
Press the "UP"/"DOWN" button to set the month and date.

[12/24 Hour Setting Display]  
Press the "UP"/"DOWN" button to set 12 Hour system or 24 Hour system.  
※ When setting the time, make sure the time is correctly set for the morning or afternoon.

[Time Setting Display]  
Press the "UP"/"DOWN" button to set the hour and minutes.  
The seconds are reset to 0 at the moment the "UP"/"DOWN" is pressed.

[°C / °F Setting Display]  
Press the "UP"/"DOWN" button to toggle between °C / °F format.

### TO CHANGE DISPLAY FORMAT

- Press "DISPLAY SELECT" button once to change display format.



Time mode



Calendar mode



Temperature & humidity mode

### TO USE DAYLIGHT SAVING TIME (DST) FUNCTION

- To toggle the time to DST, press and hold the "DST" button for 2 seconds.
- The "DST" icon will be shown and the time will be advanced by one hour automatically.
- Showing "DST" icon and press and hold the "DST" button for 2 seconds.
- The "DST" icon will disappear and the time will be moved back by one hour automatically.

### USING THE WALL - MOUNTED FUNCTION

The clock has both desktop and wall-mounting structure.

You can place it on the desktop by its stand or hang it on the wall by its recessed hole.